

UwaterG4

Manual & Quick Start Guide

Congratulations

Thank you for purchasing the **UWaterG4 100% Waterproof MP3 PLAYER**. This manual provides operating instructions to help you enjoy your music and audio books in water environment quickly and easily. Please read manual carefully before using the Player.

Caution

Player complies with IEC 60529 IPX8 waterproofing standards thus functional up to 3 meters (10FT) underwater for up to 30 minutes.


PACKAGE INCLUDES:

UWaterG4 MP3 Player • 100% Waterproof Earphones
4 sets of silicon Ear-Tips (XL, L, M, S) • USB Cable
Detachable Flex-Clip


Quick Start Guide

1. Charge battery using USB cable for about 2 HRS. LED should turn from RED to BLUE when fully charged.
2. Download songs or audio books (**MP3 Format**) using USB cable. *If necessary, follow instructions listed in this Manual or more detailed instructions at www.gearedtobefit.com.*
3. Connect earphones.
4. Switch ON by long pressing the White LED Control # 7 (7) (press and hold for 5 seconds).
5. Press PLAY (▶||). Adjust VOLUME (+/-). Navigate FORWARD (▶▶) or BACKWARD (◀◀) as desired.
6. There are 2 PLAY modes: NORMAL (sequential) and SHUFFLE (random). While in PLAY mode short press the White LED Control #7 (7) to switch modes (short press=press for 1 second). LED blinking RED indicate Normal mode. Blinking BLUE indicate Shuffle mode.
7. Summary of LED indications:
Steady RED: Charging
Steady BLUE: fully charged
Blinking RED: Normal (A-B) mode
Blinking BLUE: Shuffle Mode.
8. RESET function. Press RESET button (on back of unit) if unit jammed. Files will not be affected.
9. If assistance is needed check FAQ at: www.gearedtobefit.com

Appearance and Function Keys

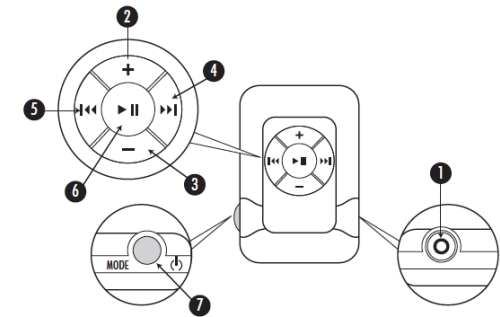

- 1 Earphone Jack
- 2 Volume Up
- 3 Volume Down
- 4 Selecting a Track (Forward)
- 5 Selecting a Track (Backward)
- 6 Play
- 7 Power/Mode (LED Indicator)

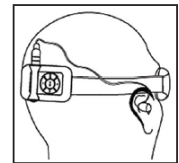

No.	Name	Function Descriptions
1	Earphone Jack	For earphones connecting to the player. For extension cable connecting to the player. For USB cable connecting to PC and recharging the built-in battery.
2	Volume Up	Press the button to increase the volume.
3	Volume Down	Press the button to reduce the volume.
4	Selecting a Track (Forward)	Press the button to forward to next track.
5	Selecting a Track (Backward)	Press the button to go back to previous track.
6	Play	Playback start/pause.
7	Power/Mode (LED Indicator)	Power ON/OFF: Press and hold for 5 seconds. Change Playback Modes: short-press to switch modes (blinking RED in NORMAL mode, blinking BLUE in SHUFFLE mode.) Recharging: Steady RED during battery recharging. Turns to steady BLUE when battery is fully charged.

Operational Instructions

Copying MP3 Files from PC to the MP3 Player:

- Connect the player to the USB port of your PC using the USB cable.
- A "🔌" icon appears at the bottom right of the Tool Bar. A "Removable Disk" icon also appears in "My Computer".
- Use the File Manager function to copy files into the player.
- Then double-click the "🔌" icon at the right bottom of the Tool Bar to disable the "Removable Disk". When the "This Disk Has Been Disabled Successfully" dialog box appears, disconnect the player from the USB port.

Recharging the Battery:

- To recharge the battery via USB port of your PC, simply connect the player using the USB cable to your PC.
- To recharge the battery using the USB charger (optional), simply connect the player to the charger using the USB cable, then connect the charger to the power supply.

*NOTE: When disconnected from the USB port after recharging or file uploading, the player switches off automatically.



USA#1 Provider of Waterproof Electronics Since 1996
Fitnessstechusa.com
info@fitnessstechusa.com
10 Banta Place
Hackensack NJ 07601

Specifications

Features:

Audio Format	MP3, WMA
Bit Rate	32Kbps - 320Kbps
Internal Memory	Built-in 1GB/2GB/4GB
Built-In Rechargeable Battery	6hrs Continuous Playing Time
USB Interface Playback Mode	USB 2.0 High Speed Normal, Shuffle
Operating System	Win XP, Win2000, WinME, Linux2.4 and above. MAC OS 9.0 and higher
Storage Temperature	10°C~+50°C
Operating Temperature	-5°C~+40°C
Dimensions (L x W x H)	56.5mm x 32.5mm x 16mm
Net Weight	21 grams (not including earphones)


How To Convert Other Formats to MP3 Format using iTunes (cont'd)

5. Make sure both iTunes and your Player window are open (double click on My Computer and locate the drive that reads "Removable Storage Device" or UWater Player).
6. Once you have both iTunes and the player window open, minimize each window so that you have equal boxes side by side.
7. Follow steps 1-3 "How To Download From iTunes" above.

How to Download Audio Books:

Audio books must be in MP3 format. Contact audio book provider for specific instructions.

Resetting the Player

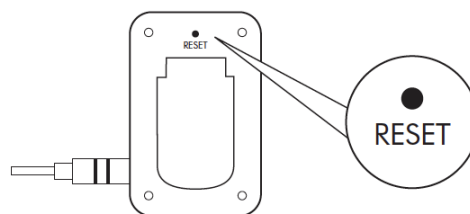

Use Resetting Pointer (included in spare ear-tips polybag) or paperclip. Short Press RESET button. Files will not be affected.

General Applications

Waterproof earphones are suitable for all general application. The Extension Cord could be used when Player is mounted on armband or clipped onto belt.

***NOTE: DO NOT USE EXTENSION CORD FOR UNDERWATER ACTIVITIES.**

Trouble Shooting

I can't turn on my Player.

Connect to your PC for recharging via USB cable. Long Press White Control. RESET if necessary.

Player is not recognized by my Computer.

Make sure USB Cable is properly connected to Player and Computer and Player is charged. RESET if necessary.

There is no sound while Player is ON and PLAY Control is activated.

Make sure Player is charged and audio files (songs, audio books) were downloaded. Make sure earphones are properly connected and VOLUME + Control is adjusted. RESET if necessary.

Sound was lost or weakened while swimming.

Probably water reached over eartips into your ear canals blocking sound. Improve fitting eartips or use larger eartips (try use the triple action eartips while playing). RESET if necessary

How to Download from iTunes

1. Select songs from your iTunes music library that you want to download. (You can hold the CTRL button down on your keyboard for multiple tracks.)
2. Using your mouse, simply drag and drop the music selected into the window of your Player.
3. The status light on Player will flash red as the songs are being downloaded.

How To Convert Other Formats to MP3 Format using iTunes

1. Select songs from your library that you want converted to MP3 format by highlighting them. (For multiple songs, hold the CTRL button on your keyboard and select songs using your mouse.)
2. Locate the Advanced tab on the iTunes menu bar.
3. In the Advanced drop down menu, choose Convert Selection(s) to MP3.
4. iTunes will now begin creating copy of the songs you selected in MP3 format. (You may now delete the original version of songs you selected to convert, if you choose. The new MP3 formatted songs can now be dragged and dropped into your Player.)



USA#1 Provider of Waterproof Electronics Since 1996
Fitnessstechusa.com
info@fitnessstechusa.com
10 Banta Place
Hackensack NJ 07601