

4.3750 width X 3.5 height

4.3750 width X 3.5 height

**Fitness
Technologies**

Bogota, NJ 07603 USA
www.uwatermp3.com

100% WATERPROOF

**UWATER
MP3 PLAYER
& EARPHONES
OWNER'S MANUAL**



SWIM



SAIL



SURF



SKI

BACK

FRONT COVER

Owner's Manual

Thank you for purchasing the Uwater waterproof MP3 Player.
This manual provides operating instructions to help you enjoy your music
and audio books in water environment quickly and easily.
Please read manual carefully before using the Player.

Warnings

1. ALWAYS screw down firmly the earphone jack onto the Player before entering the water.
2. NEVER unscrew or detach earphone jack while in the water.
3. Player complies with IEC 60529 IPX8 waterproofing standards thus functional up to 3 meters (10 FT) underwater for up to 30 minutes. However, it is not recommended to use Player in diving.

Quick Start Guide

A.Charge battery for 2 HRS (use USB cable)

B.Download songs (use USB cable)

C.Listen To Music:

1. Connect earphone(screw down jack firmly)
2. Switch ON by press and hold control #7 "⏻" (5-6 seconds)
3. Press PLAY (▶||). Adjust VOLUME (+/-) .
Navigate FORWARD (▶▶) and BACKWARD (◀◀) as needed.
4. Short press Control #7 to change play mode from NORMAL to SHUFFLE. Short press again to return to NORMAL.
5. Switch OFF by press and hold control #7 "⏻" (5-6 seconds).

D. LED Indications (Control#7):

Steady RED: charging

Steady BLUE: fully charged


Blinking RED: Normal (A-B) Mode

Blinking BLUE: Shuffle Mode

E. Auto shutoff:

When player is unplugged from PC or power source.

Appearance and Function Keys

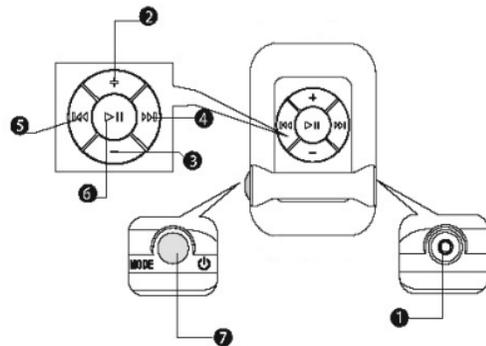

No.	Name	Function Descriptions
1	Earphone plug (USB Port/Changer Socket)	<ul style="list-style-type: none"> • For earphones connecting to the player • For extension cable connecting to the player • For USB cable connecting to PC and recharging the built-in battery.
2 +	Volume Up	
3 -	Volume Down	• Press the button to increase volume.
4 ▶▶	Selecting a Track (Forwards)	• Press the button to reduce volume.
5 ◀◀	Selecting a Track (backwards)	• Press the button to forward to the next track.
6 ▶	Play	• Press the button to backward to the previous track.
		• Playback start/pause.
7 MODE ⏻	Power/Mode LED indicator	<ul style="list-style-type: none"> • Power ON/OFF:press and hold for 5 sec. • Change Playback Modes:short-press to switch modes (blinking RED in NORMAL mode, blinking BLUE in SHUFFLE mode). • Recharging: steady RED during battery recharging. Turns to steady BLUE when battery is fully charged.

Operational Instructions

Copying MP3 Files from PC to the MP3 Player

- Connect the player to the USB port of your PC using the USB cable.
- A " " icon appears at the right bottom of the Tool Bar. A "Removable Disk" icon also appears in "My Computer".
- Use the File Manager function to copy files to the player.
- Then double-click the " " icon at the right bottom of the Tool Bar to disable the "Removable Disk". When the "This Disk Has Been Disabled Successfully" dialog box appears, disconnect the player from the USB port.

Recharging the Battery

- To recharge the battery via USB port of your PC, simply connect the player using the USB cable to your PC to recharge the battery.
- To recharge the battery using the USB charger (optional), simply connect the player to the charger using the USB cable, then connect the charger to the power supply.

***Note:** When disconnected from the USB port after recharging or file uploading, the player switches off automatically.

Specifications

Features:

Audio Format	MP3, WMA
Bit Rate	32Kbps-320Kbps
Internal Memory	built-in 1 GB/2GB/4GB
Built-In Rechargeable battery	6hrs Continuous Playing Time
USB interface	USB 2.0 High Speed
Playback Mode	Normal, Random
Operating system	Win XP, Win2000, WinME, Linux2.4 and above. MAC OS 9.0 and higher
Storage Temperature	10°C~+50° C
Operating temperature	-5°C~+40° C
Dimensions(LxWxH)	56.5 x 32.5 x 16mm
Net Weight	21 grams(not including earphones)

Appendix


Important Notice

Please follow the steps below to ensure the waterproof protection before entering the water.

- waterproof earphones must be used for swimming:


Step 1:

- waterproof earphones must be used for swimming: Eartips must be assembled.

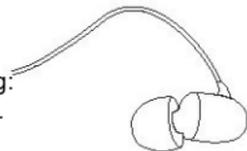


Screw the earphone plug tightly into the earphone jack on the player.

Step 2:


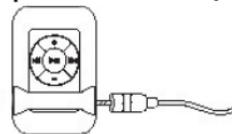


Step 3:

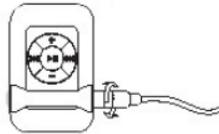


Clip the MP3 player onto the goggles, headband. (For swimming)

Step 4:

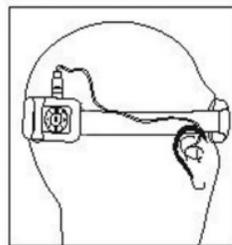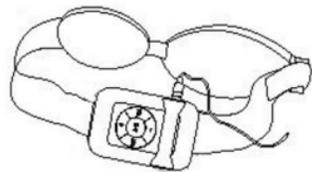


General Applications

- Both waterproof earphones and normal earphones (included) and normal earphones (available separately as accessory) are suitable for general applications.

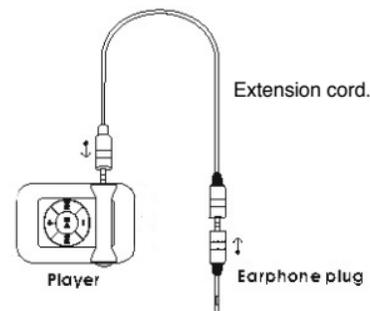


8.2 Resetting the player

- Using the reset pointer to plug into the earphone jack to reset the player

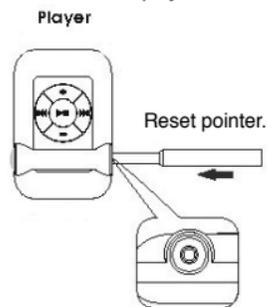

8.3 Recharging/Uploading MP3 player

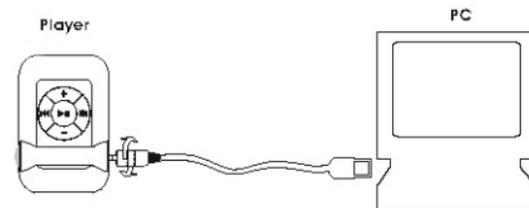

Troubleshooting

Problem	Remedy
I can't turn on my Player	<ul style="list-style-type: none">• Connect to your PC for recharging.
After I turn ON my Player, it shuts down immediately.	<ul style="list-style-type: none">• Possibly low battery level. Connect to your PC for recharging.
I can't use the USB cable to recharge My Player.	<ul style="list-style-type: none">• Make sure you are using the original USB cable provided in package.• Connect Player to PC using USB cable and check that the Operating system is recognizing Player.• Reset Player (see Reset Instructions).
There is no sound while Player is ON.	<ul style="list-style-type: none">• make sure Player is charged.• Make sure earphones are properly plugged in.• If you are using the waterproof earphones, make sure earphone plug is screwed down firmly.• Adjust VOLUME.• Make sure water did not penetrate earphones. If they did, remove ear-tips, rinse and dry.• Reset Player (see Reset Instructions).
Player doesn't work but LED is ON	<ul style="list-style-type: none">• Reset Player (see Reset Instructions)
I can't connect my Player to PC	<ul style="list-style-type: none">• make sure Player is connected appropriately using original USB cable.• Make sure USB cable was connected to player before it was connected to PC. A reverse plugging sequence may result in failure of connection between the player and your PC.